

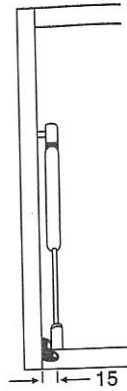


AIR PRESS STAY

DOWNWARD STAY

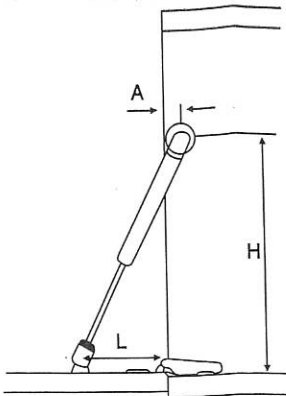

When the door opening angle is 110° you can choose the load capacity as below:

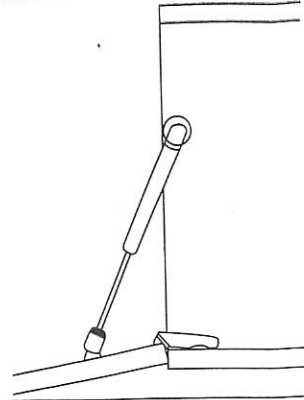


Choose big angle hinge			
Door opening angle	H (mm)	L (mm)	A (mm)
90°	260	90	45
110°	255	80	45

Load capacity (N)	Door height(mm)/Door weight(kg)			
	300	400	500	600
80	2.1	1.6	1.2	1.0
100	2.6	1.9	1.6	1.3
120	3.1	2.3	1.9	1.6
150	3.5	2.6	2.2	1.9


Choose middle angle hinge			
Door opening angle	H (mm)	L (mm)	A (mm)
90°	253	90	25
110°	248	80	25

Installation sheet

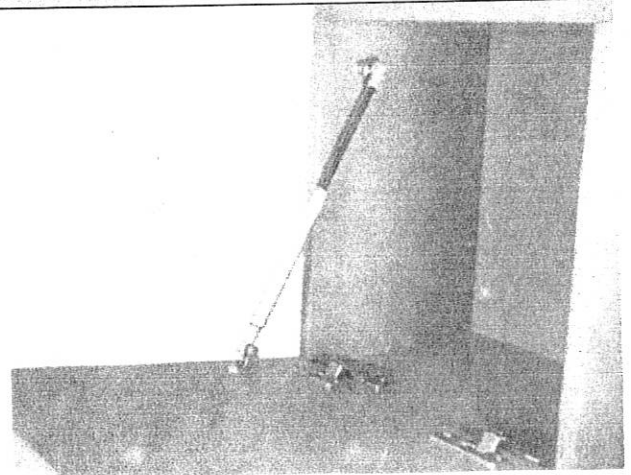

Choose small angle hinge			
Door opening angle	H (mm)	L (mm)	A (mm)
90°	246	90	25
110°	241	80	25

When the door opening angle is 90° you can choose the load capacity as below:

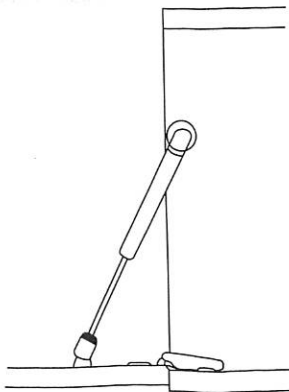

Load capacity (N)	Door height(mm)/Door weight(kg)			
	300	400	500	600
80	2.4	1.8	1.4	1.2
100	3.0	2.2	1.8	1.5
120	3.6	2.7	2.1	1.8
150	4.1	3.2	2.3	2.1