

SAFETY AND CARE

Always take care when using power tools, particularly if there is any water in the working area.

Do not use a hammer drill when drilling into a tiled surface.

Always use a drill bit that is suitable for the surface that is being drilled.

The wall plugs supplied are for use on solid walls only. For cavity walls or plasterboard use specialist fixings that are suitable for the type of wall construction.


To retain the best quality finish, clean product regularly with a soft damp cloth.

Do not use abrasive or chemical cleaners, as these will damage the product.


Do not use this product as a grab bar.

If the gliders become sticky, use a small amount of furniture polish to improve performance.


Do not overload the rail. Suitable for use with a maximum of two standard shower curtains.

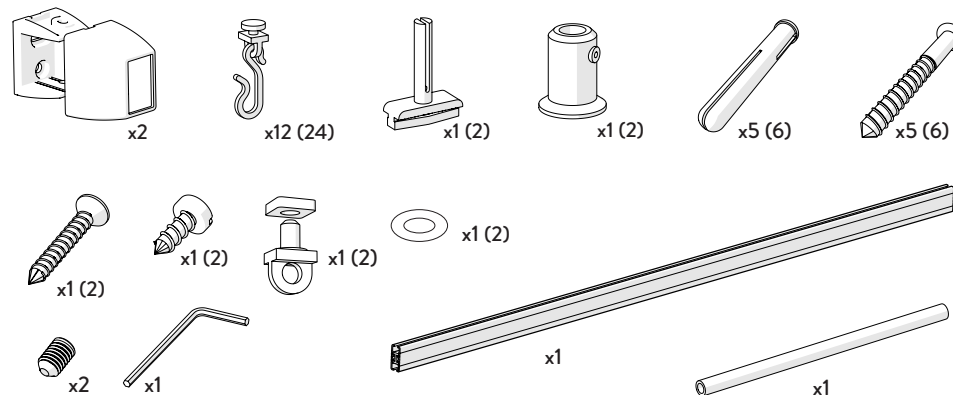

Quantities of parts may vary due to product sizes.
The ceiling support rod components are not supplied with the straight rails.

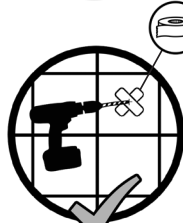


1 Insert the wall brackets onto each end of your rail.

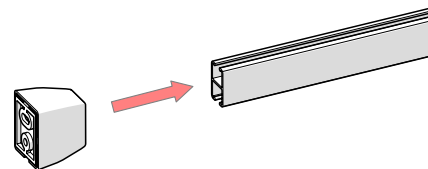


2 If required cut the rail to the desired length and then hold the rail in position ensuring there is adequate curtain overlap into the bath or shower tray.

Mark the position of each wall bracket on the mounting surface.


Use a spirit level to ensure it is level.

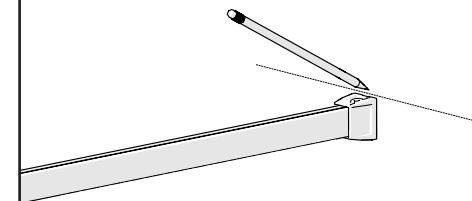


3 After you have marked the location of the wall brackets on the mounting surface, measure the distance between the top of the bracket and the ceiling.

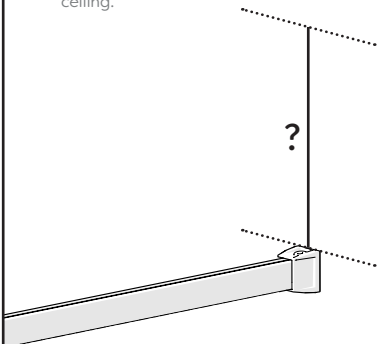

4 Use that measurement to cut the ceiling support rod to the correct size.

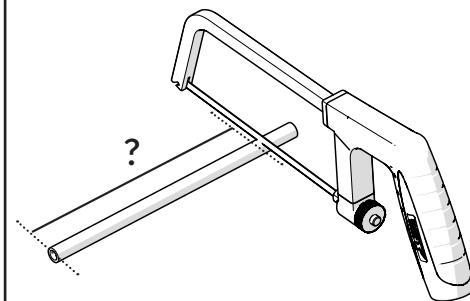

5 Separate the wall bracket from the bracket cover.

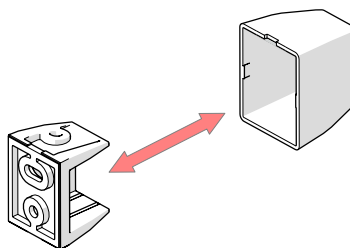

6 Place the wall brackets in the marked location, ensuring that the open face of the wall bracket is facing towards the showering area, then mark the hole positions.

