

# RIM CYLINDER FITTING INSTRUCTIONS

We recommend consulting a professional if you are unfamiliar with installing hardware fixtures.

**Tools required:** Ruler/Measuring Tape, 32mm Drill Bit, Bradawl/Pencil

1. At the required height, use a pencil to mark 40mm (narrow style lock) or 60mm from the edge of the door. Drill a 32mm diameter hole through the door. **(See Fig.1)**
2. Remove the key and insert the cylinder through the outer ring and insert it through the hole. **(See Fig.2)**

Note: If necessary, use a fine toothed hacksaw to shorten the flat connecting bar so that it projects 12mm beyond the surface of the mounting plate. **(See Fig.3)**

3. Check the Rim Latch Fitting Instructions (FITCB0106) for further steps on how to install the rim cylinder with a rim latch.

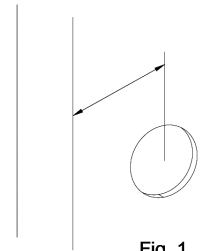


Fig. 1

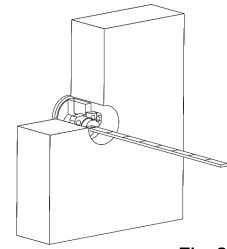


Fig. 2

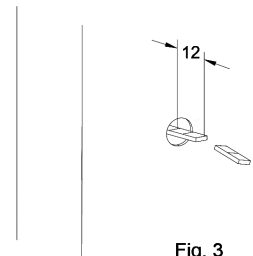


Fig. 3